 

















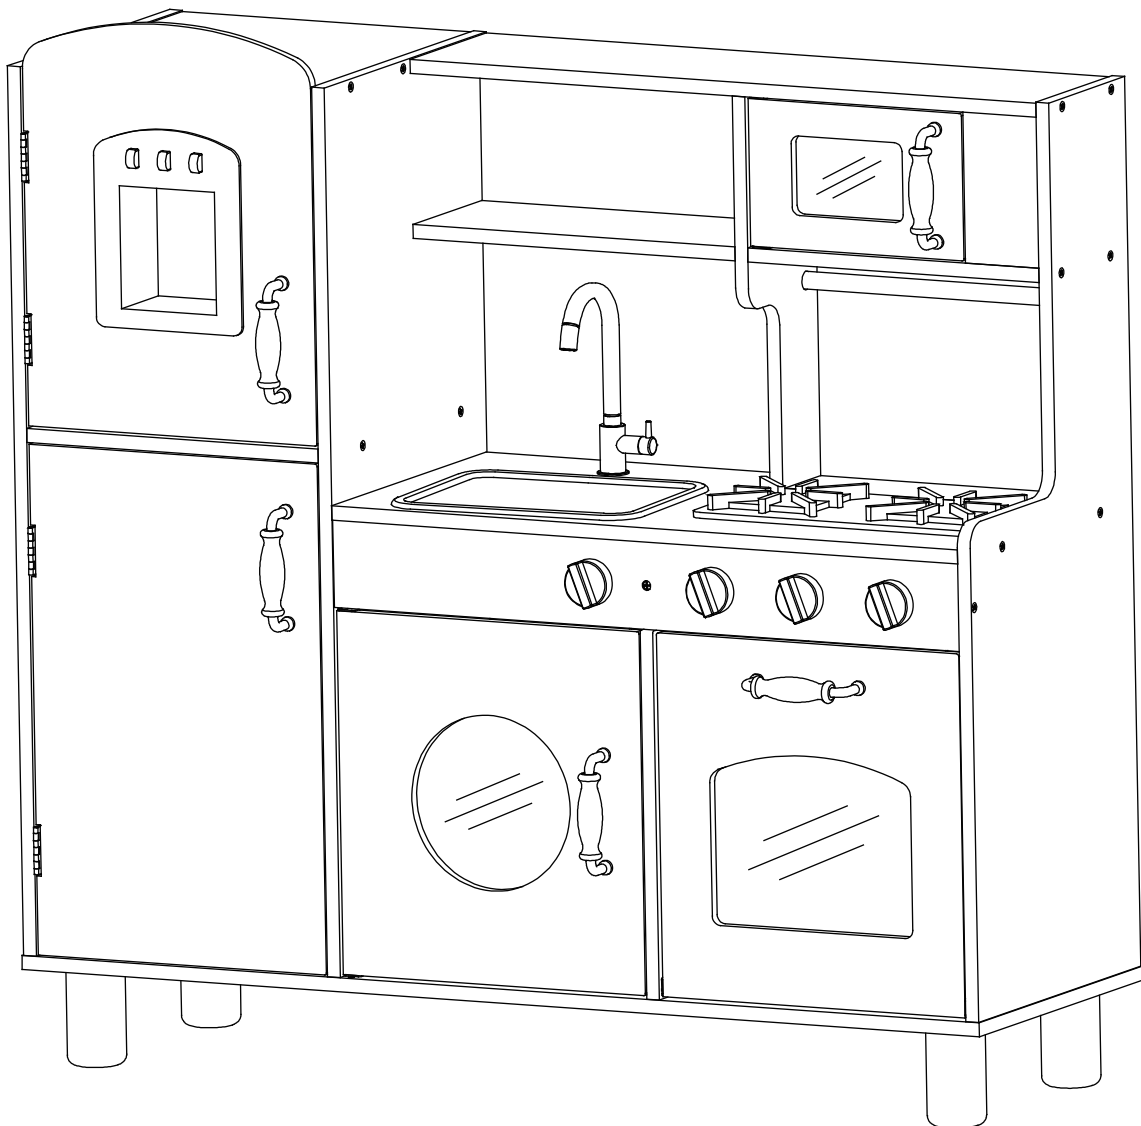



























Classic World Kök, Grönt

10194917




                                         ASSEMBLY INSTRUCTION

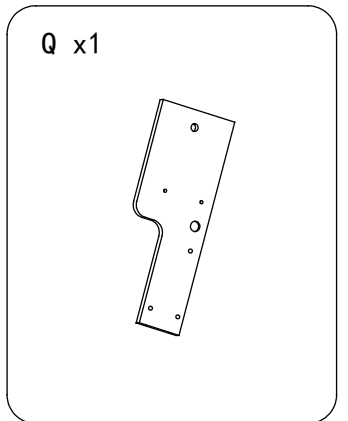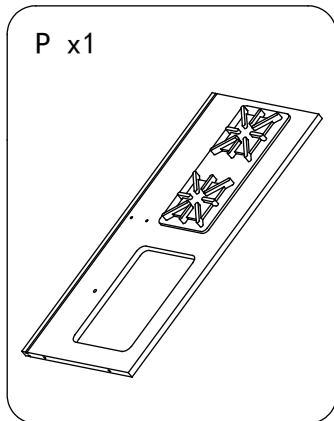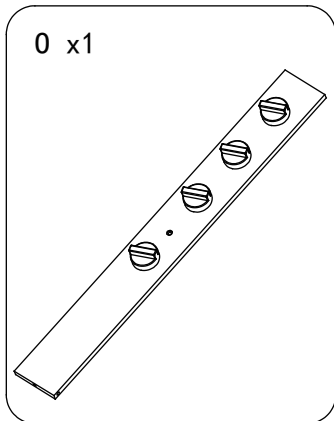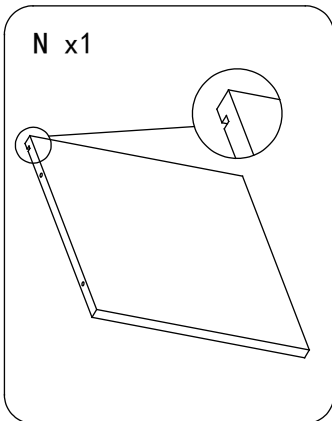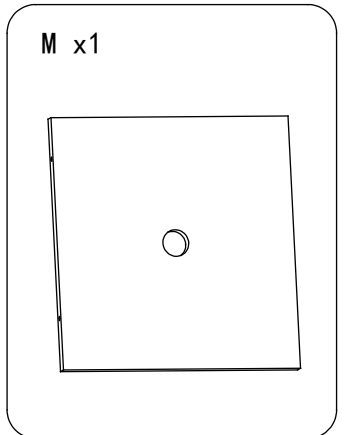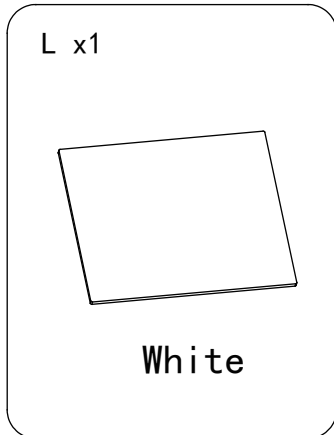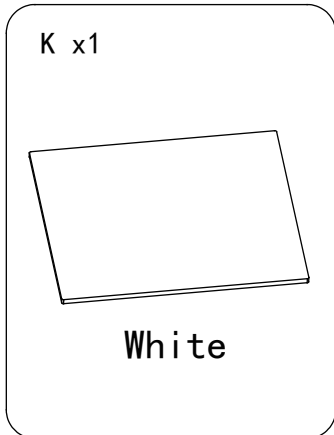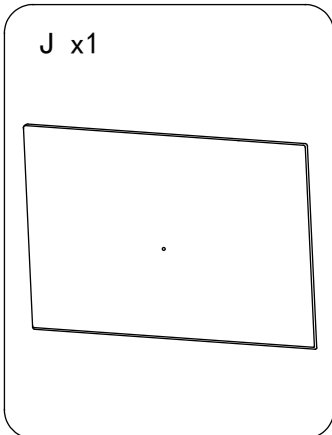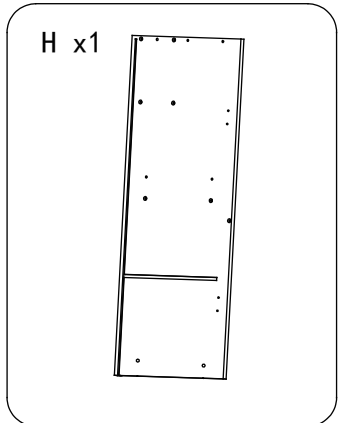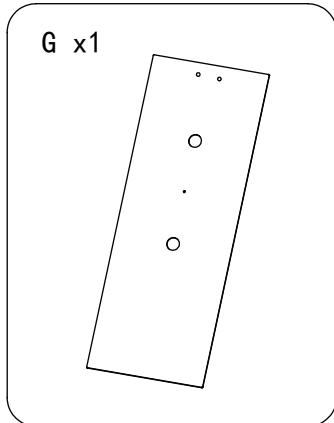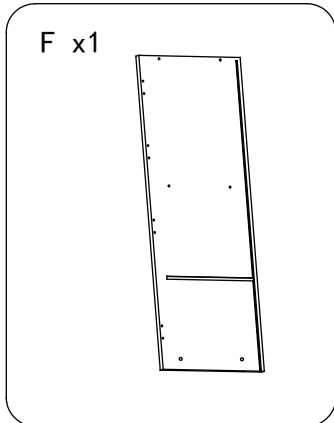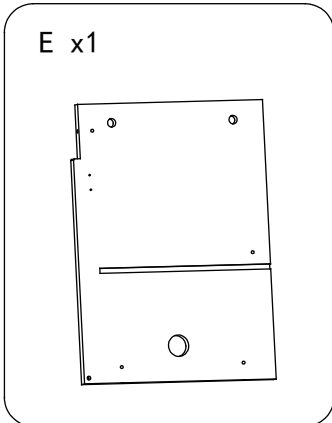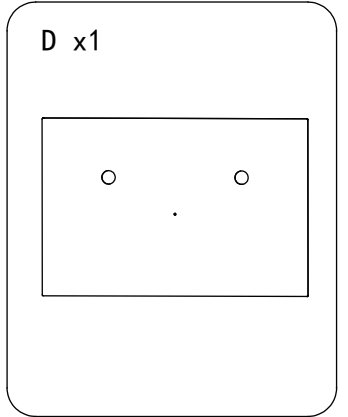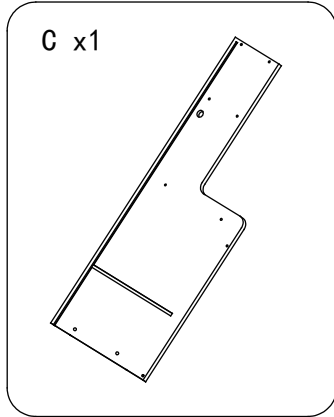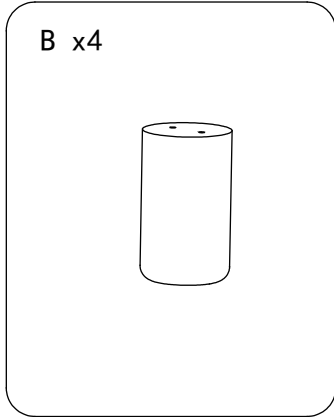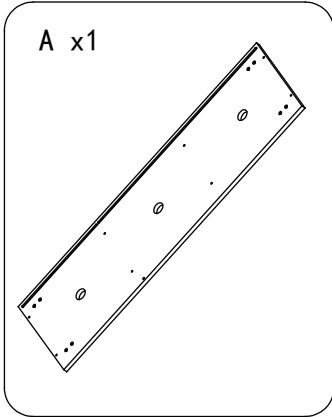


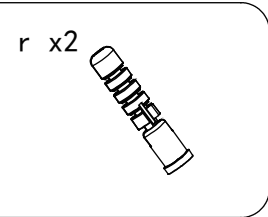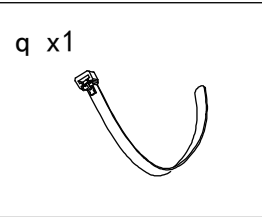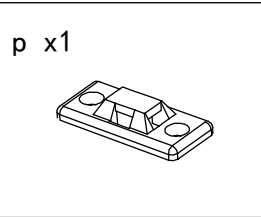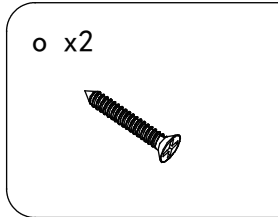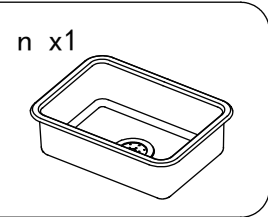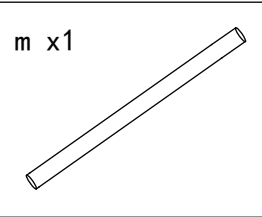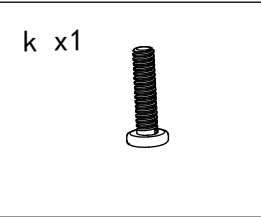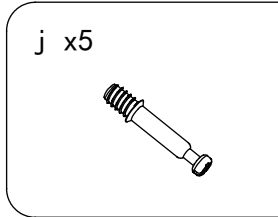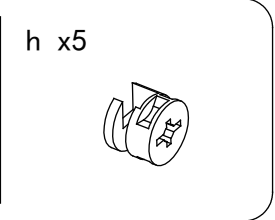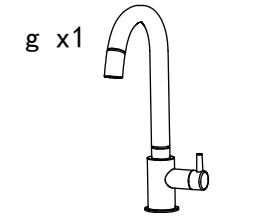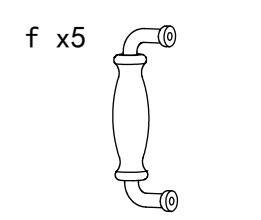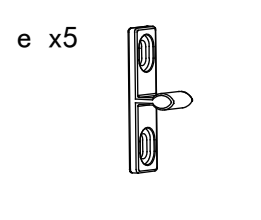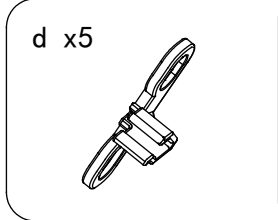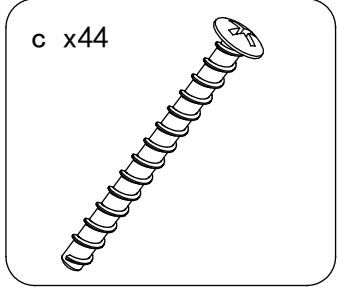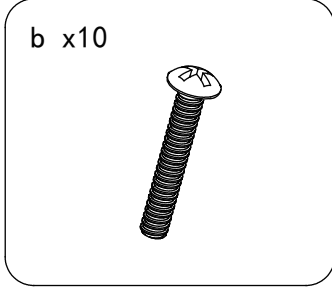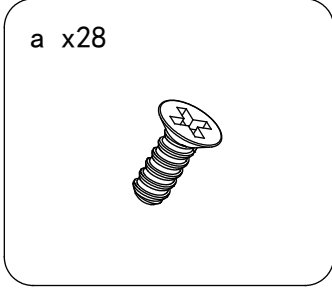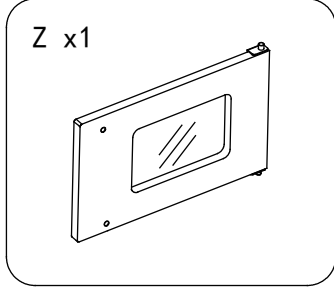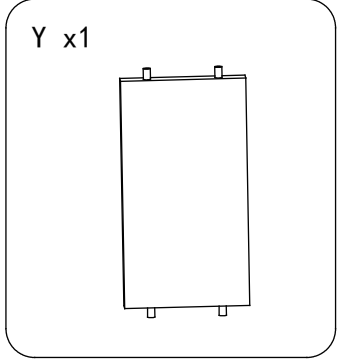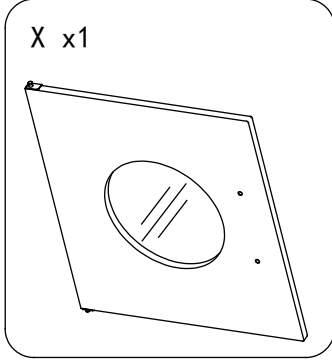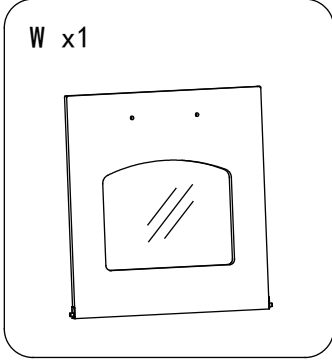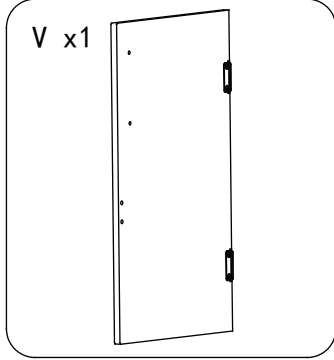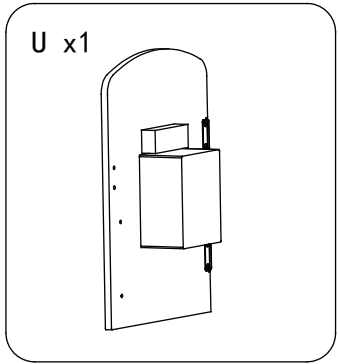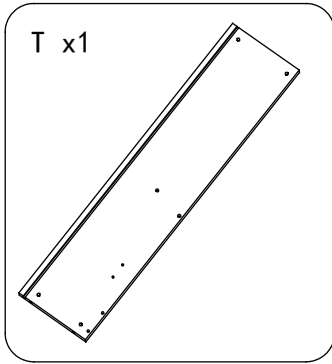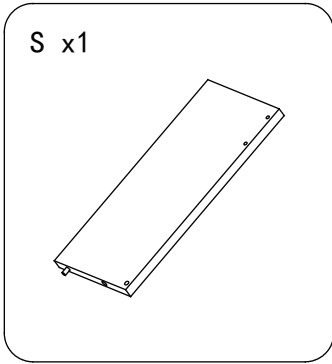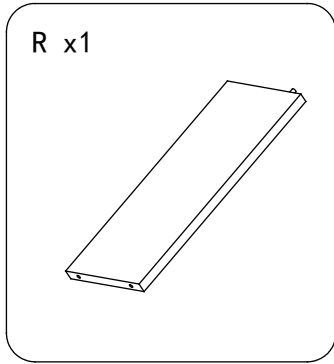

 
Step 1

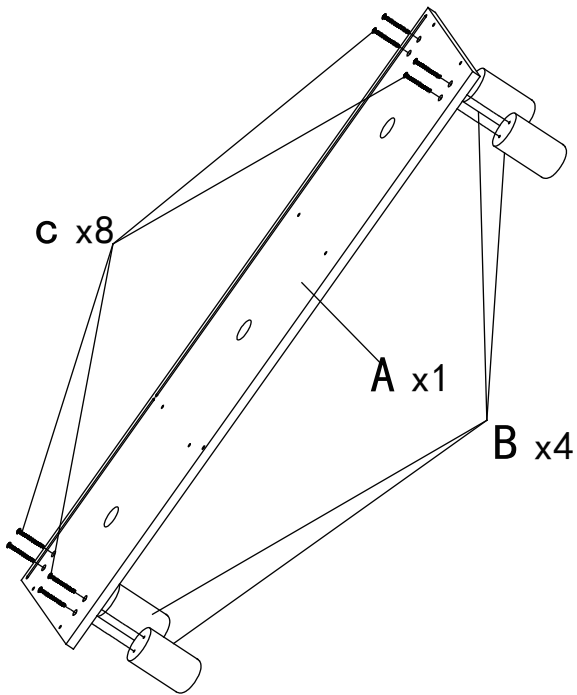

 
Step 2

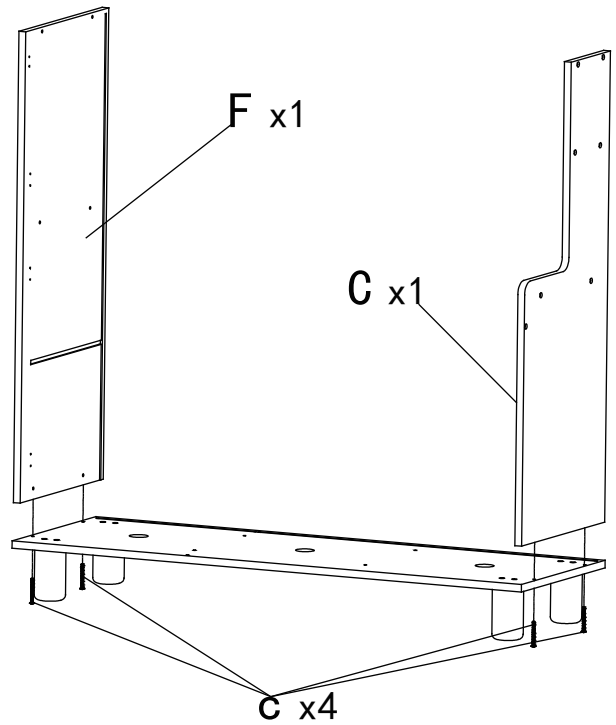

 
Step 3

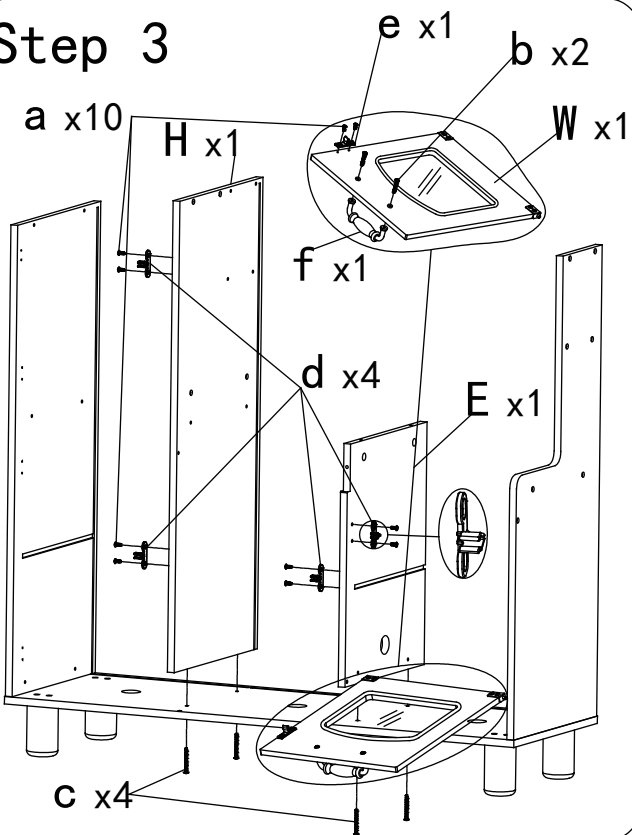

 
Step 4

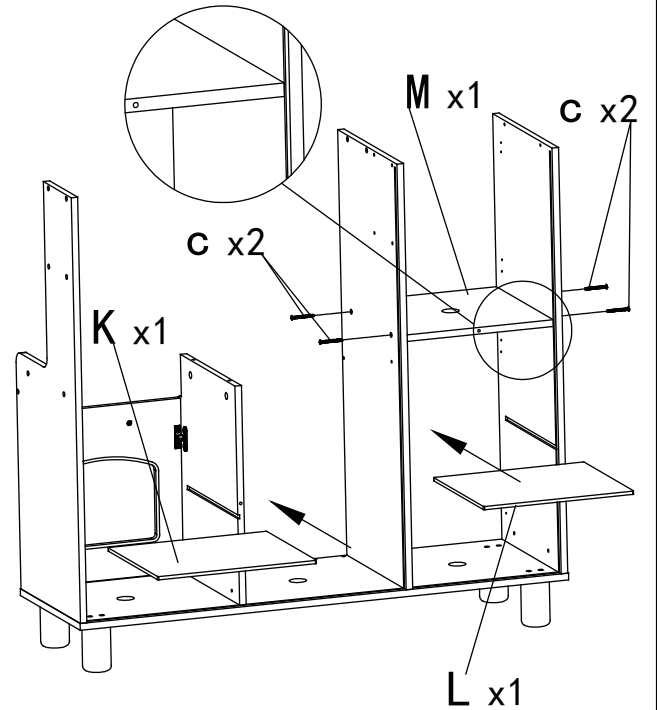

 
Step 5

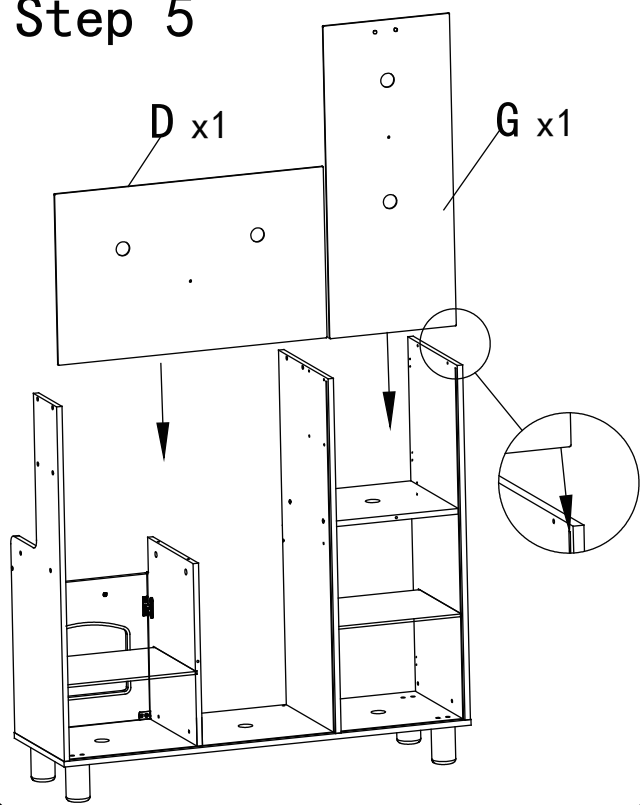

 
Step 6

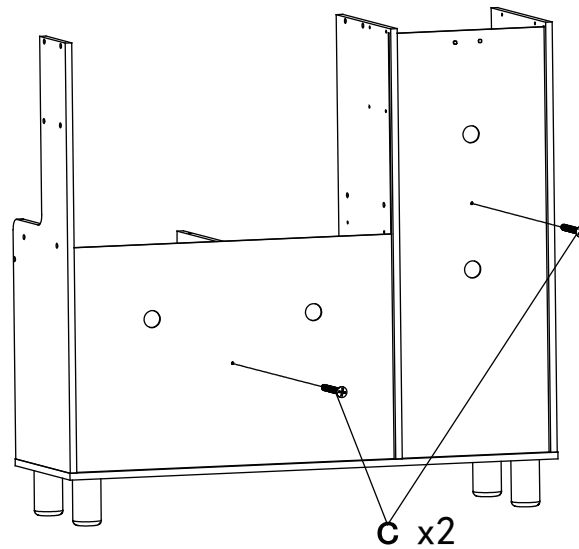

 
Step 7

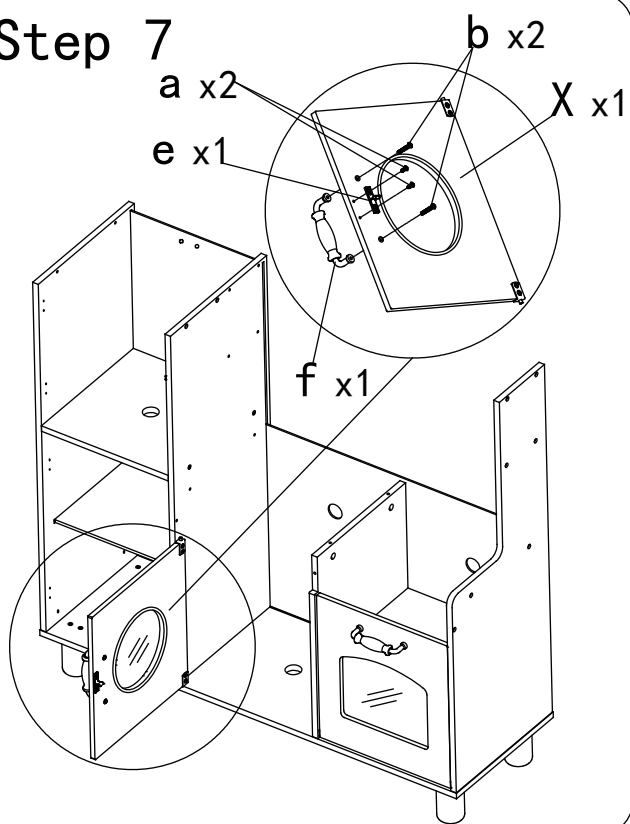

 
Step 8

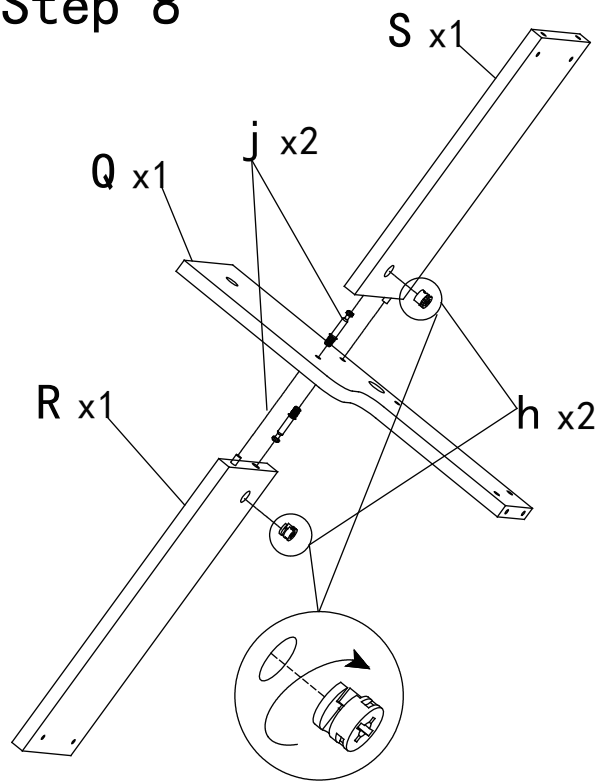

 
Step 9

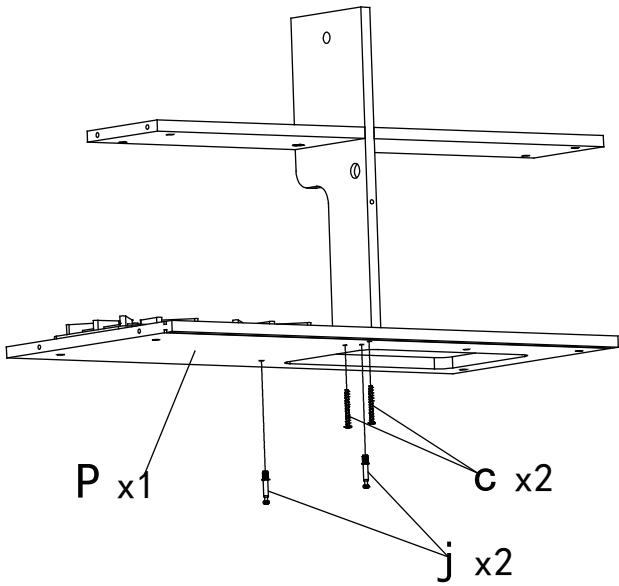

 
Step 10

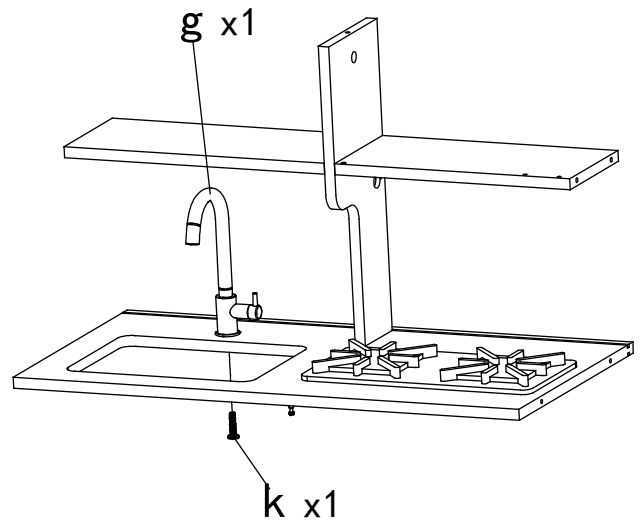

 
Step 11

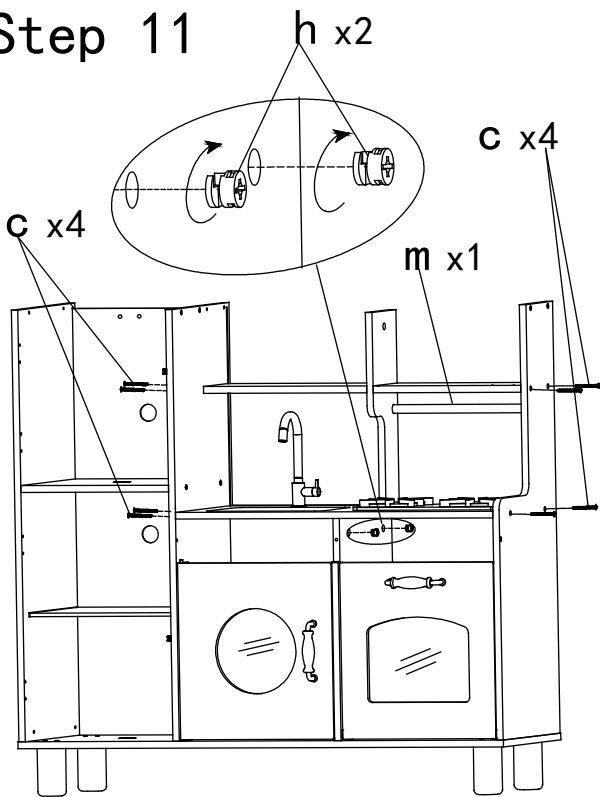

 
Step 12

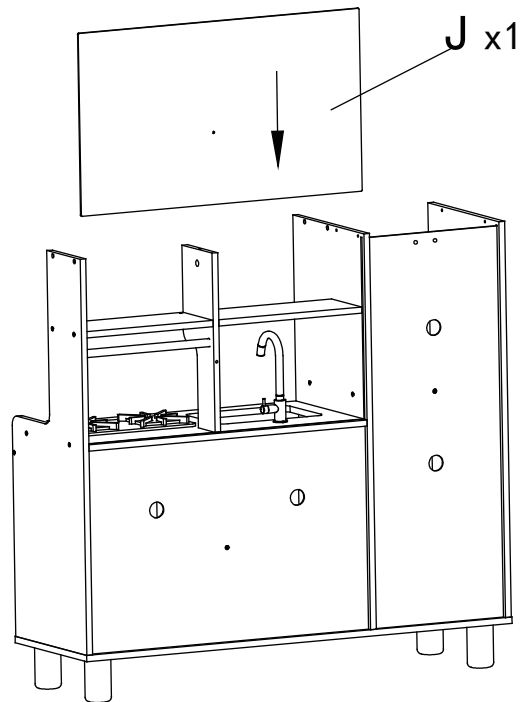

 
Step 13

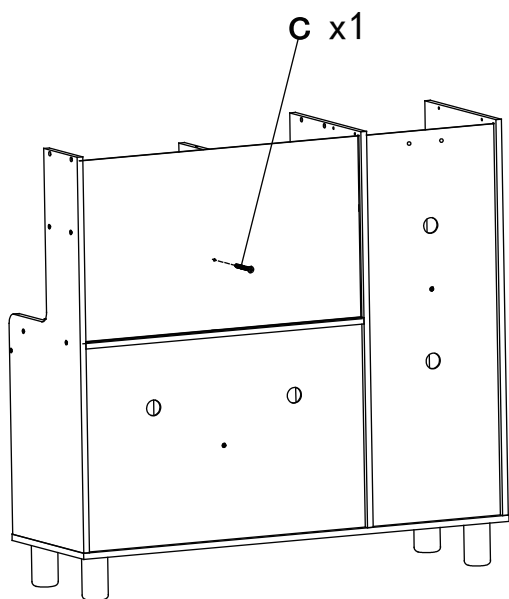

 
Step 14

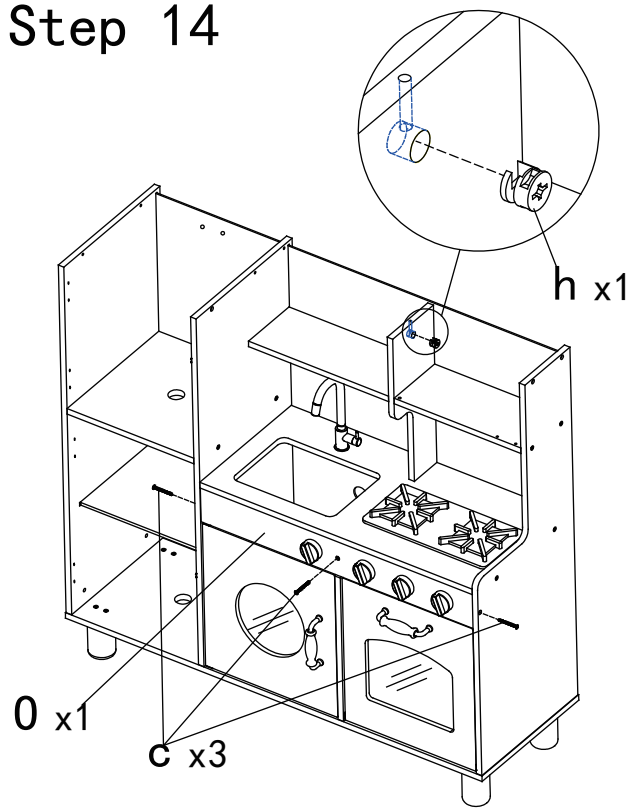

 
Step 15

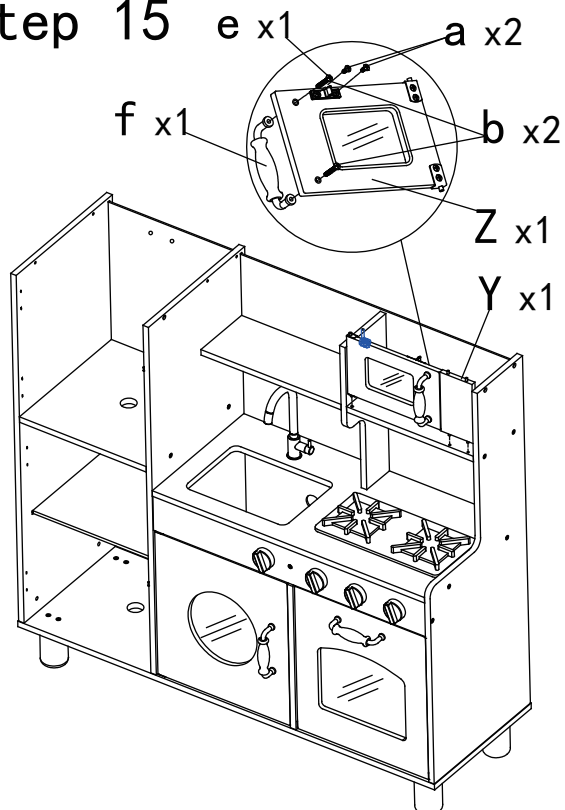

 
Step 16

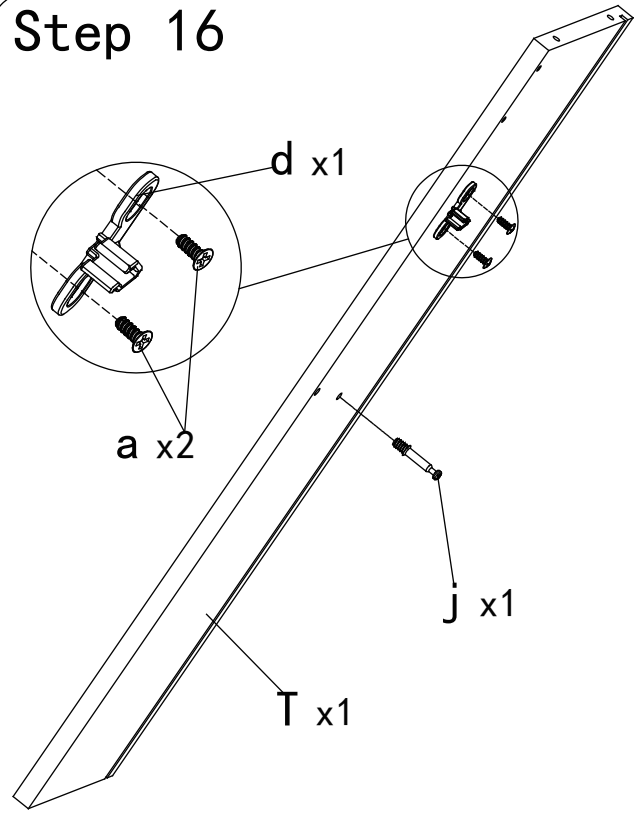

 
Step 17

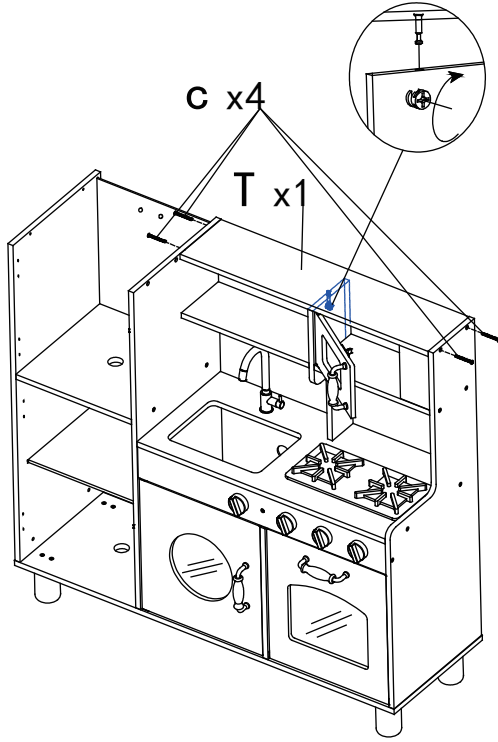

 
Step 18

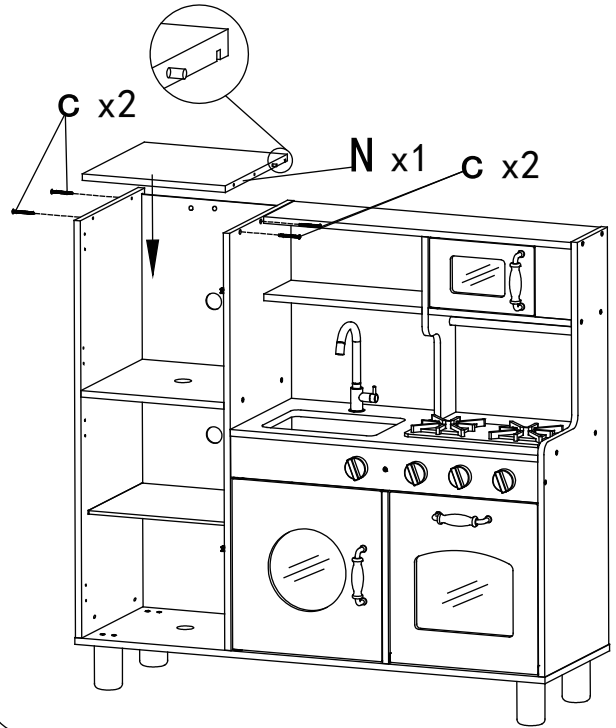

 
Step 19

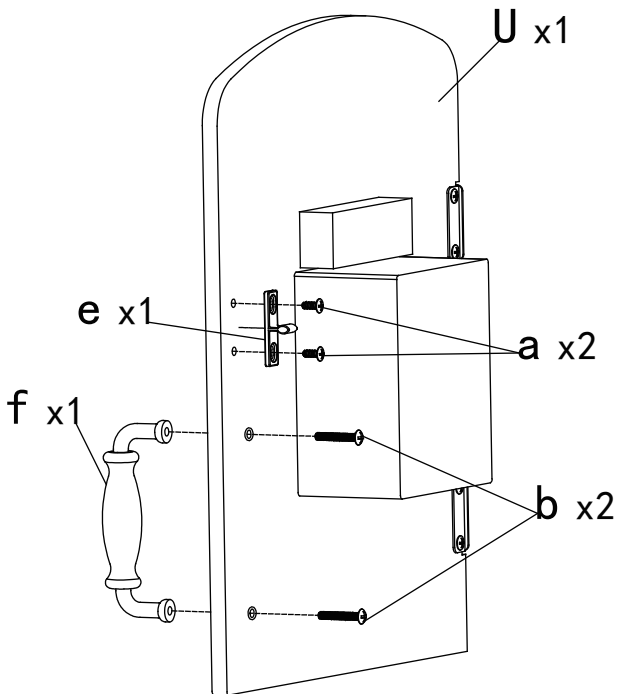


 
Step 20

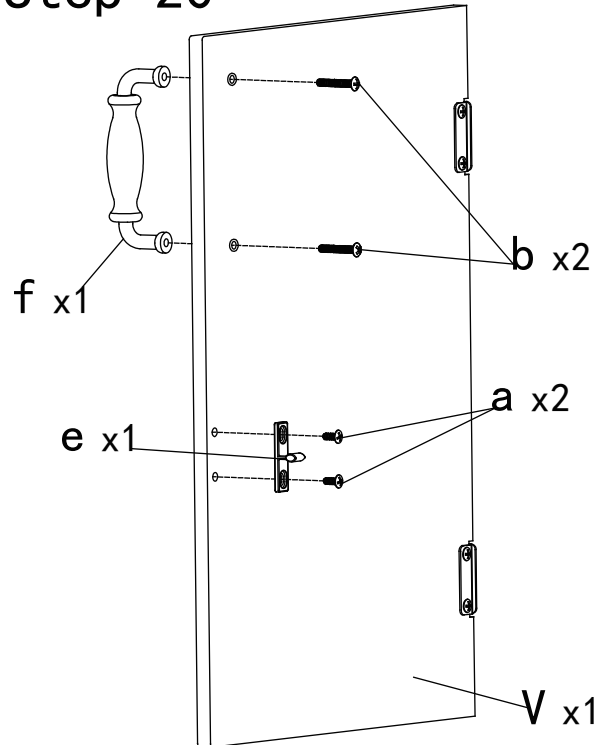

 Step 21

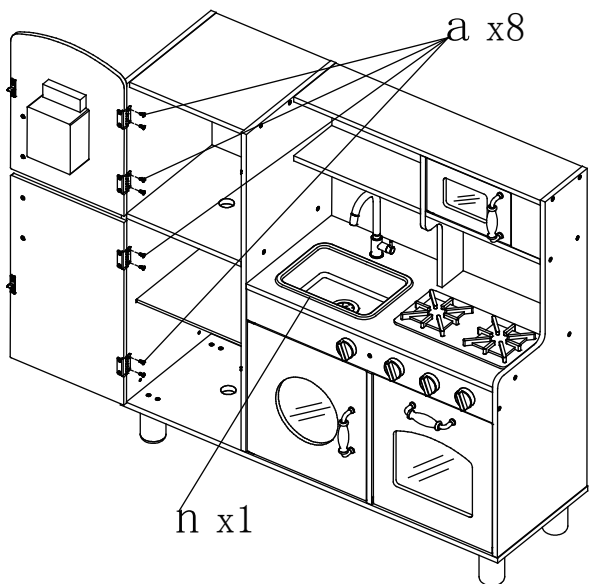

  Step 22

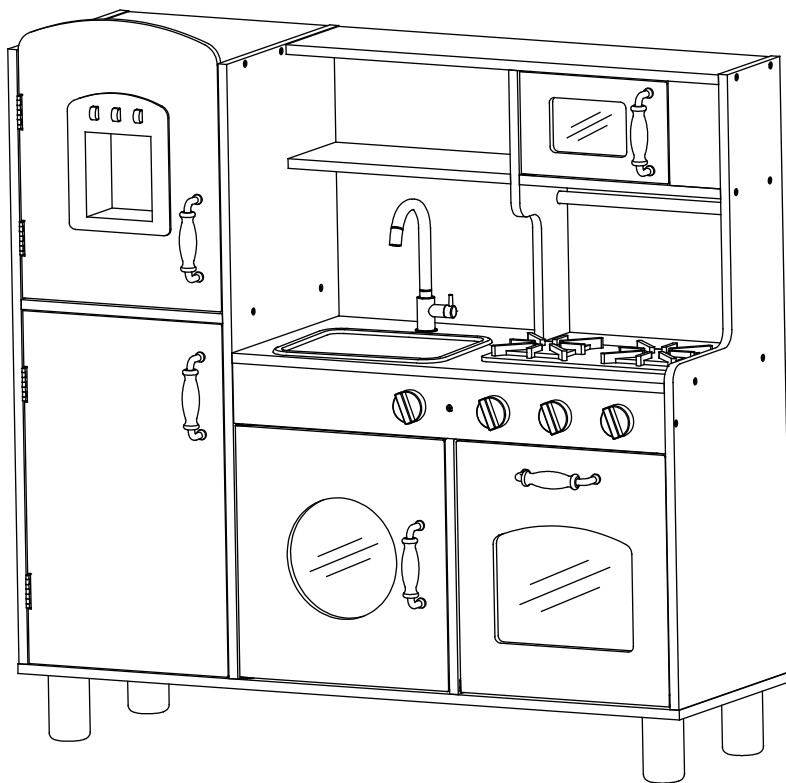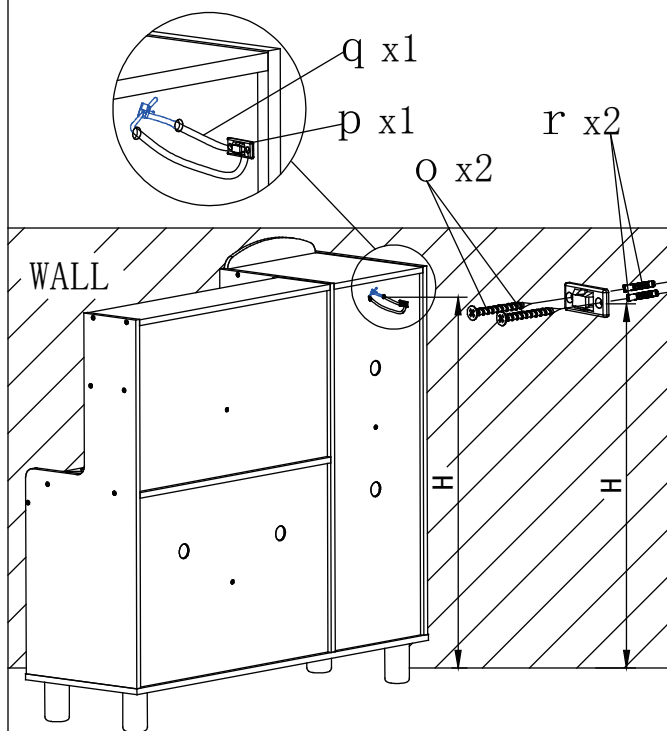

ENG

WARNING:CHOKING HAZARD--Small Parts
Not for children under 3 years. Assembly by
an adult.

DK

ADVARSEL: KVÆLNINGSFARE – små dele.
Ikke egnet til børn under 3 år. Skal monteres
af en voksen.

FI

VAROITUS: TUKEHTUMISVAARA – Sisältää
pieniä osia, ei sovellu alle 3-vuotiaalle. Vain
aikuihin saa koota tuotteen.

DE

ACHTUNG: ERSTICKUNGSGEFAHR - Kleinteile
Nicht für Kinder unter 3 Jahren. Montage durch
Erwachsene.

NO

ADVARSEL: KVELNINGSFARE--Små deler.
Ikke egnet for barn under 3 år. Skal monteres
av en voksen.

SE

VARNING: KVÄVNINGSRISK - SMÅDELAR
Ej för barn under 3 år. Monteras av vuxen.